


## IMPORTANT - FOR YOUR SAFETY

1. Please read these instructions carefully before using your new essentials 1600W travel hairdryer for the first time.
  2. The hairdryer is suitable for use in the UK and elsewhere in the world where the mains supply voltage is 110V or 220/240Vac 50/60Hz. Please check that the voltage rating marked on the rating plate of your hairdryer (e.g. 110V or 220/240V) corresponds with your actual supply voltage.
  3. Regular care and cleaning is essential to maintain your hairdryer in peak working condition. Check the air filter at the back of the hairdryer is kept free from dust and hair.
  4. Always unplug your hairdryer from the mains when not in use.
  5. **DO NOT** poke anything into your hairdryer – Danger of electric shock.
  6. **DO NOT** use the hairdryer in a bathroom or near sinks or other vessels containing water.
- 
7. **DO NOT** wrap the cord around the hairdryer, this may damage the cable and cause early failure.
  8. **DO NOT** place the hairdryer on soft furnishings such as carpeting or bedding while the motor is running.
  9. **DO NOT** block the air inlet or outlet grille while the hairdryer is running.
  10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and

user maintenance shall not be made by children without supervision.

11. **DO NOT** use this hairdryer for any purpose other than drying human hair.
12. Some parts of the hairdryer will get warm or hot in use, take care not to touch hot surfaces – danger of burning.
13. Allow to cool before packing this hairdryer away.
14. Please keep these instructions in a safe place for future reference.
15. After use, turn off the appliance and unplug from the mains supply. Allow to cool in a safe place out of the reach of young children.
16. Regularly inspect the appliance and it's mains cable for signs of damage. If the appliance or it's mains cable is found to be damaged it should be scrapped.

## GENERAL DESCRIPTION



- A Concentrator nozzle
- B On / off switch and heat / speed control
- C Air inlet grille
- D Mains cable
- E Folding handle

## OPERATING INSTRUCTIONS

This essentials 1600W travel hairdryer should ONLY be used on human hair, do not use on synthetic hair or wigs.

1. For best results wash and towel dry your hair before using the hairdryer.
2. Before use, check what the local supply voltage is before using this hairdryer. The Hotel or local holiday representative will be able to help you.
3. Ensure that the voltage selector switch, on the side of the hairdryer handle, is set to a voltage range that covers the local supply voltage.  
  
If the voltage selector is pointing to the wrong setting it should be changed using a pen tip or similar tool so that the indicator points at the correct, local, supply voltage.
4. Plug the hairdryer into the mains supply, if using abroad you may need to use a travel adaptor
5. The hairdryer has two heat / speed settings that can be selected on the main switch mounted on the handle. The first position marked 'OFF', the second marked '☼' is the slow speed low heat setting and the third marked '☼☼' is the high speed high heat setting
6. The air concentrator is used for directing the airflow to help styling or for spot drying. It is easily attached by gently pushing the concentrator onto the front of the hairdryer until it clicks into position. Once in position it can be twisted to direct the air in the direction that best suits your needs.
7. Always turn the hairdryer off and unplug it from the mains supply after use, never put the hairdryer down or leave unattended whilst switched on and running.

## PROBLEM SOLVING

This essentials 1600W travel hairdryer is designed with an internal thermal cut-out to protect the hairdryer in the event of overheating. If the hairdryer cuts out during use it should be switched off and allowed to cool for a few minutes. Examine the inlet and outlet grilles and filter, if fitted, and clean away any dust or hair. The thermal cut-out will reset automatically when the hairdryer has cooled, the hairdryer can then be used as normal.

**DO NOT CONTINUE TO USE THE HAIRDRYER IF IT CUTS OUT REPEATEDLY EVEN AFTER CLEANING.**

0QIN366BOUKN4

## CARE AND MAINTENANCE

If the essentials 1600W travel hairdryer fails to work please check that it is being used in accordance with these instructions. It is also important to make sure the fuse in the plug and the mains supply is intact and that the mains supply is turned on.

If after checking the above, the hairdryer is found to be faulty, and is within the guarantee period, it should be returned to your nearest Boots store stocking this item together with proof of purchase.

Regularly inspect the hairdryer and its mains cable for signs of damage.

If the supply cord or the hairdryer is found to be damaged it should be scrapped. This product contains no user serviceable parts.

## CLEANING

Before cleaning ensure the essentials 1600W travel hairdryer is disconnected from the mains supply and if it's just been used, it has had time to cool down.

Clean the outside of the hairdryer using a damp, not wet, cloth and dry thoroughly before using.

Clear any hair or debris from the grille on the back of the hairdryer and from the larger grill on the front.

**DO NOT** immerse the hairdryer in water.  
**DO NOT** use petroleum based or flammable cleaning agents because of the risk of fire.  
**DO NOT** use abrasive cleaning agents.

## WIRING

In the UK it is not permissible to fit an electric socket capable of operating this hairdryer in a bathroom. However, the European Standard EN 60335-2-23 requires us to advise you of the following. If the hairdryer is used in a bathroom, unplug it after use, since the proximity of water presents a hazard even when the dryer is switched off. For additional protection, you should install a residual current device (BCD) with a rated operating current not exceeding 30mA in the electrical circuit supplying the bathroom. Your electrician can advise you on these issues.

## WARRANTY

In addition to your statutory rights, Boots UK Limited agrees that if any defect in materials or workmanship appears in the product within two years after the original date of consumer purchase it will repair or, at its option, replace the product free of charge. This applies only if the product has been used for domestic purposes and has not been damaged through misuse, accident or neglect and has not been modified or repaired by anyone other than Boots or its authorised agents.

If a defect appears, please check that the article is being used in accordance with the instructions. If so, return it with this warranty and proof of purchase to your nearest Boots store which stocks this article or similar articles, as soon as possible.

Boots UK Limited reserves the right to modify this product without notice.

## DISPOSAL

In order to minimize hazards to health and the environment and ensure that materials can be recycled, this product should be disposed of at a separate collection facility for waste electrical and electronic equipment.

The Wheelie Bin symbol marked on products is there to remind you



essentials

1600W  
travel hairdryer

## INSTRUCTIONS FOR USE



Item 33-36-220

Made In China

Boots UK Limited  
Nottingham  
England  
NG2 3AA

www.boots.com