


IMPORTANT - FOR YOUR SAFETY

1. Please read these instructions carefully before using your new essentials 2000W hairdryer for the first time.
 2. This hairdryer is suitable for use in the UK and elsewhere in the world where the mains supply voltage is 220V to 240V ac 50/60Hz. Please check that the voltage rating marked on the rating plate of your hairdryer (e.g. 220 – 240V) corresponds with your actual supply voltage.
 3. Regular care and cleaning is essential to maintain your hairdryer in peak working condition. Check the air inlet grille at the back of the hairdryer is kept free from dust and hair.
 4. Always unplug your hairdryer from the mains when not in use.
 5. **DO NOT** poke anything into your hairdryer – Danger of electric shock.
 6. **DO NOT** use the hairdryer in a bathroom or near sinks or other vessels containing water.
- 
7. **DO NOT** wrap the cord around the hairdryer, this may damage the cable and cause early failure.
 8. **DO NOT** place the hairdryer on soft furnishings such as carpeting or bedding while the motor is running.
 9. **DO NOT** block the air inlet or outlet grille while the hairdryer is running.
 10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and

user maintenance shall not be made by children without supervision.

11. **DO NOT** use this hairdryer for any purpose other than drying human hair.
12. Some parts of the hairdryer will get warm or hot in use, take care not to touch hot surfaces as danger of burning.
13. Allow to cool before packing this hairdryer away.
14. Please keep these instructions in a safe place for future reference.
15. After use, turn off the appliance and unplug from the mains supply. Allow to cool in a safe place out of the reach of young children.
16. Regularly inspect the appliance and it's mains cable for signs of damage. If the appliance or it's mains cable is found to be damaged it should be scrapped.

GENERAL DESCRIPTION

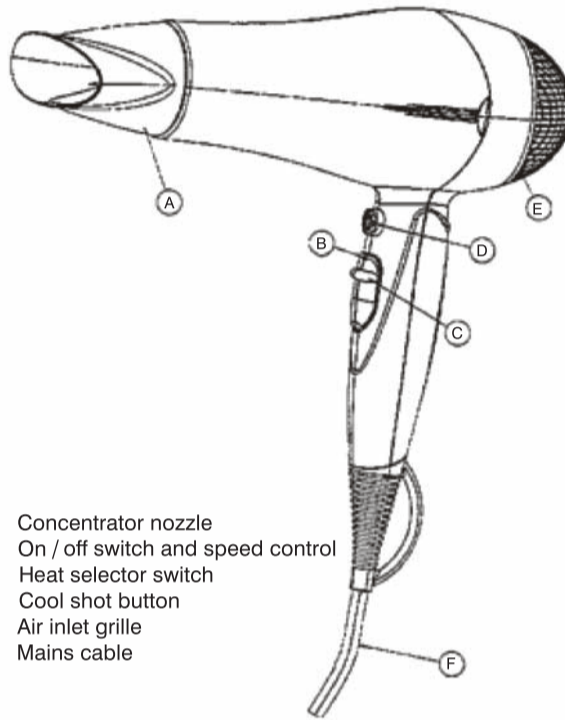

- A Concentrator nozzle
- B On / off switch and speed control
- C Heat selector switch
- D Cool shot button
- E Air inlet grille
- F Mains cable

OPERATING INSTRUCTIONS

This essentials 2000W hairdryer should ONLY be used on human hair, do not use on synthetic hair or wigs.

1. For best results wash and towel dry your hair before using the hairdryer.
2. Plug the hairdryer into the mains supply, this product is suitable for use with supply voltages in the range 220V to 240V ac.
3. The hairdryer has three heat and two speed settings that can be selected by two switches mounted on the handle.
4. The air concentrator is used for directing the air flow to help with styling or for spot drying. It is easily attached by gently pushing the concentrator onto the front of the hairdryer until it clicks into position.
5. The COOL shot feature can be used at any time and simply causes the dryer to produce a cool stream of air for helping to lock styles into place.
6. Always turn the hairdryer off and unplug from the mains supply after use, never put the hairdryer down or leave unattended whilst still switched on and running.

PROBLEM SOLVING

This essentials 2000W hairdryer is designed with an internal thermal cutout to protect the hairdryer in the event of overheating. If the hairdryer cuts out during use it should be switched off and allowed to cool for a few minutes. Examine the inlet and outlet grilles and filter, if fitted, and clean away any dust or hair. The thermal cutout will reset automatically when the hairdryer has cooled, the hairdryer can then be used as normal.

DO NOT CONTINUE TO USE THE HAIRDRYER IF IT CUTS OUT REPEATEDLY EVEN AFTER CLEANING.

0QIN361BOUKN4

CARE AND MAINTENANCE

If the essentials 2000W hairdryer fails to work please check that it is being used in accordance with these instructions. It is also important to make sure the fuse in the plug and the mains supply is intact and that the mains supply is turned on.

If after checking the above, the hairdryer is found to be faulty and is within the guarantee period, it should be returned to your nearest Boots store stocking this item together with proof of purchase.

Regularly inspect the hairdryer and its mains cable for signs of damage.

If the supply cord or the hairdryer is found to be damaged it should be scrapped. This product contains no user serviceable parts.

CLEANING

Before cleaning ensure the essentials 2000W hairdryer is disconnected from the mains supply and if it's just been used, it has had time to cool down.

Clean the outside of the hairdryer using a damp, not wet, cloth and dry thoroughly before using.

Clear any hair or debris from the grille on the back of the hairdryer and from the larger grill on the front.

DO NOT immerse the hairdryer in water.
DO NOT use petroleum based or flammable cleaning agents because of the risk of fire.
DO NOT use abrasive cleaning agents.

WIRING

In the UK it is not permissible to fit an electric socket capable of operating this hairdryer in a bathroom. However, the European Standard EN 60335-2-23 requires us to advise you of the following. If the hairdryer is used in a bathroom, unplug it after use, since the proximity of water presents a hazard even when the dryer is switched off. For additional protection, you should install a residual current device (RCD) with a rated operating current not exceeding 30mA in the electrical circuit supplying the bathroom. Your electrician can advise you on these issues.

WARRANTY

In addition to your statutory rights, Boots UK Limited agrees that if any defect in materials or workmanship appears in the product within two years after the original date of consumer purchase it will repair or, at its option, replace the product free of charge. This applies only if the product has been used for domestic purposes and has not been damaged through misuse, accident or neglect and has not been modified or repaired by anyone other than Boots or its authorised agents.

If a defect appears, please check that the article is being used in accordance with the instructions. If so, return it with this warranty and proof of purchase to your nearest Boots store which stocks this article or similar articles, as soon as possible.

Boots UK Limited reserves the right to modify this product without notice.

DISPOSAL

In order to minimize hazards to health and the environment and ensure that materials can be recycled, this product should be disposed of at a separate collection facility for waste electrical and electronic equipment.

The Wheelie Bin symbol marked on products is there to remind you



essentials

2000W
hairdryer

INSTRUCTIONS FOR USE



Item 33-38-673

Made In China

Boots UK Limited
Nottingham
England
NG2 3AA

www.boots.com